

CAP91SC - 18 x 36 x 90  
Storage Cabinet with  
adjustable shelves



CAP91HF - 25 x 49 x 95  
HEPA filtered garment  
storage cabinet



# Series 91

## Storage Cabinet

The Series 91 line of storage cabinets is designed to meet a variety of cleanroom needs. These storage cabinets are constructed with a welded, 16 Ga cold-rolled steel shell and finished with white baked-enamel paint. The cabinets feature clear acrylic doors with chrome plated handles.

### Features

- ❖ All metal construction – no particle board
- ❖ Shipped fully assembled
- ❖ White baked enamel painted finish
- ❖ Clear acrylic doors

**HEPA Filtered Storage Cabinets**

The Series 91HF HEPA filtered garment storage cabinet utilizes an aluminum-framed motorized HEPA filter for nearly 100-percent interior cabinet ceiling coverage. The HEPA filter provides approximately 650 CFM of laminar flow to the storage environment. The high airflow volume along with the laminar flow helps remove airborne contamination from the cabinet and garments as they are removed and returned to the rack.

The Series 91HF - 25 x 49 x 95 storage cabinet comes with a garment pole that can accommodate 24 garments with 2 inch spacing or 16 garments with 3 inch spacing. The cabinet is enclosed on the front by clear acrylic hinged doors with chrome plated handles. The top is sloped for

easy cleaning and access to the prefilter.

Optional adjustable wire or perforated shelves can be installed within the cabinet to provide an ultra clean storage environment.


**Storage Cabinets – Non-filtered**

The Series 91SC storage cabinets are cleanroom-compatible storage cabinets (No HEPA filter). Its heavy-gage, painted steel construction will not crack, break apart or harbor contamination as cabinets made of laminated particle board do.

The standard cabinet is furnished with five solid available shelves. The cabinets are available in four standard sizes with custom sizes available upon request.

**Options**

- Center divider
- Wire or perforated adjustable shelving
- Garment pole
- Stainless steel shell
- White polypropylene
- ULPA filter 99.999% efficient
- Ionization bar
- Hangers and hanger spacers
- Stainless steel door frame
- Custom sizes

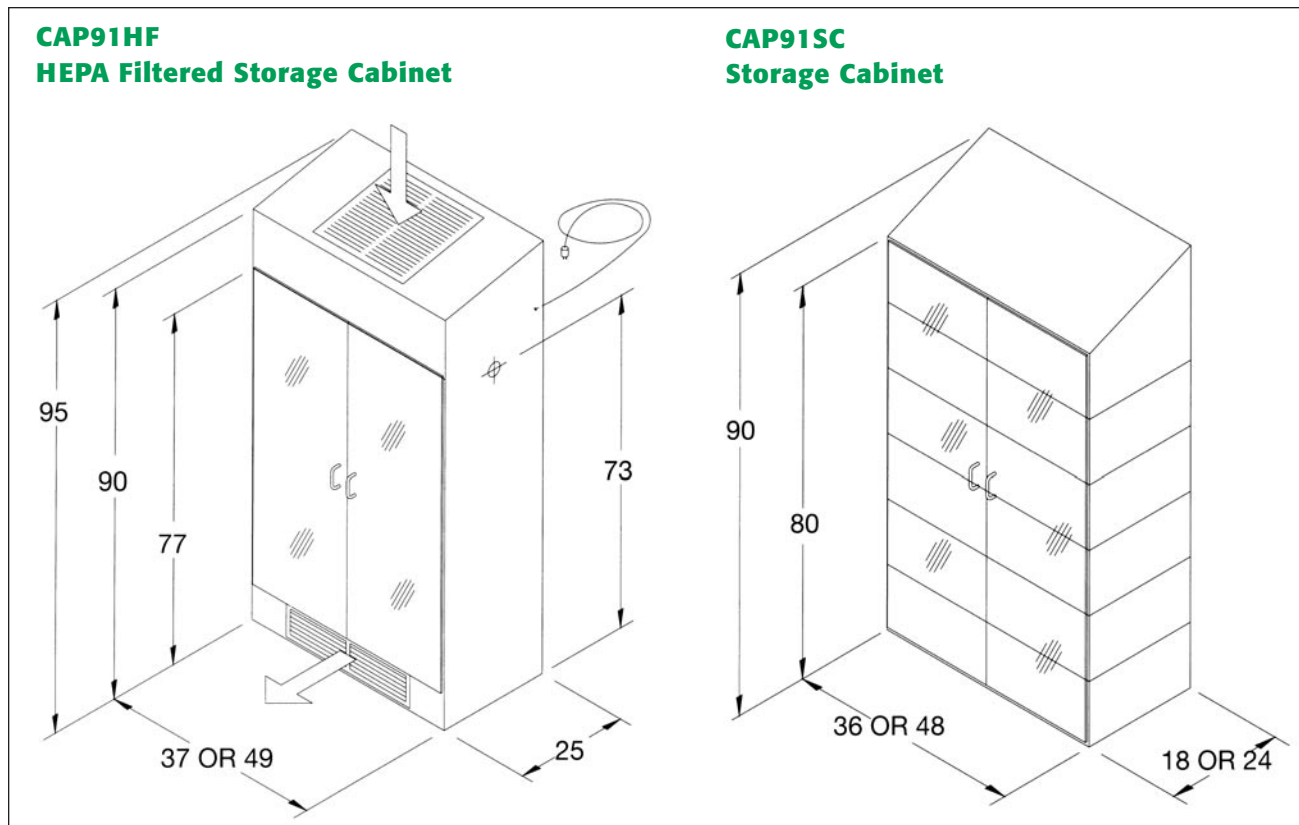

Specifications subject to change. Please contact factory for details.



**Solutions Built to Your Specifications.**

8605 Wyoming Ave. N. • Minneapolis MN 55445  
 tel: 763.425.9122 800.423.9728 fax: 763.425.2004  
 e-mail: sales@cleanairproducts.com [www.cleanairproducts.com](http://www.cleanairproducts.com)